



# SW-1070



---

Hybrid Control Panel

Safe & Secure

## SW-1070 **User Manual** (UK & Ireland)

[www.hkc.ie](http://www.hkc.ie)



# Security

Installer \_\_\_\_\_  
Address \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Tel: \_\_\_\_\_ Fax: \_\_\_\_\_

After Hours: \_\_\_\_\_

Date: \_\_\_\_\_

Alarm Centre - Technistore (UK only)

Tel: \_\_\_\_\_

***Note:*** Please refer to RKP inner flap label for more details of Quick Codes, Inhibits and Audio Memo-Pad operation.

**WARNING**

While this system has been designed to the highest standards it does not offer guaranteed protection against burglary or fire. Any alarm system is subject to compromise or failure to activate for a variety of reasons. Therefore, good installation practices and regular maintenance are essential to ensure continuous satisfactory operation of the system. The transmission of text messages is dependent on the SMS service provider. HKC Ltd. cannot guarantee successful messaging. Messages which remain undelivered when the validity period expires are discarded. The validity period is the time the message is submitted plus 12 hours.

**COPYRIGHT**

© HKC Ltd. All Rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated in another language in any form or by any means - electronic, mechanical or otherwise without the prior written permission of HKC Ltd.

**DISCLAIMER**


HKC Ltd. makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Further, HKC Ltd. reserve the right to revise this publication and to make changes from time to time in the contents hereof without obligation of HKC Ltd. to notify any person of such revision.



This marking certifies that this product has been tested in a representative system complying with the requirements laid down in Electromagnetic Compatibility directive 89/336/EEC and Low Voltage Directive 72/23/EEC and subsequent modifications.

# USER MENU

Press **0** followed by the User Code. The first User Menu item is...

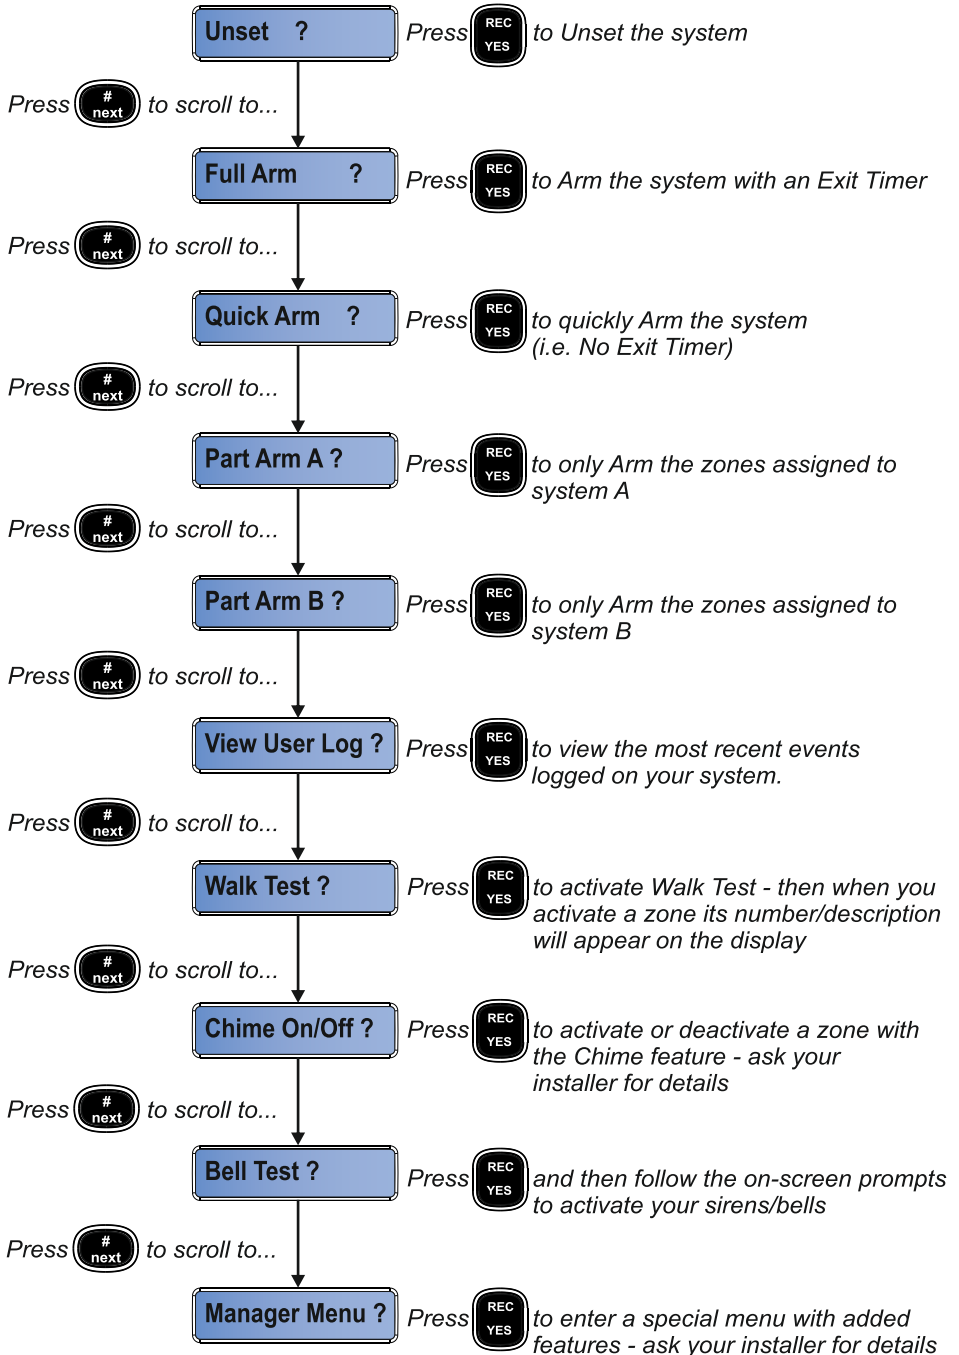

# MANAGER MENU




Your system may be programmed to work without a User Menu. In which case...

## FULL SET With Exit Timer

Press  followed by User Code  
OR if allowed...

Press    User Code\*

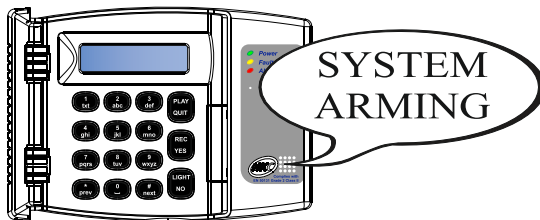




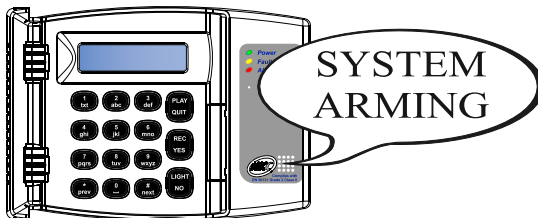
Buzzer sounds for length of exit time

Keypad displays exit time remaining



## FULL SET Without Exit Timer

Press    User Code\*



Keypad displays....


**System Arming**

\* *Quick Code with User Code is EN 50131 requirement*


# SYSTEM UNSET

To unset the system or cancel an alarm

Press  followed by User Code

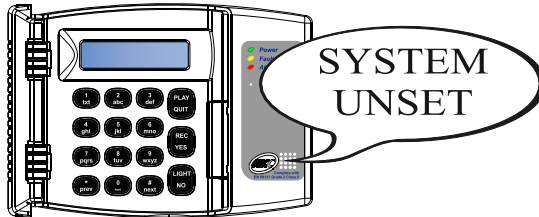


Note: If there was an alarm activation then the keypad will make an announcement.

You can terminate this by pressing 

## SYSTEM SET & UNSET with PROXIMITY TAG

Just bring the tag to the keypad as shown. The system will automatically set. Using the tag a second time will then unset the system

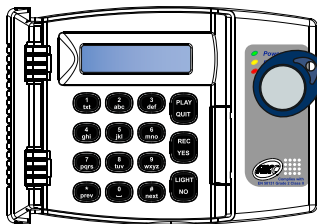

This is the location on the keypad to read a proximity tag.

Note: This feature is only available on keypads with this graphic.




## PART SET A

*Partial arming of the system*

Part set will automatically inhibit the following zones ....

\_\_\_\_\_/\_\_\_\_\_  
\_\_\_\_\_/\_\_\_\_\_

Press    User Code\*

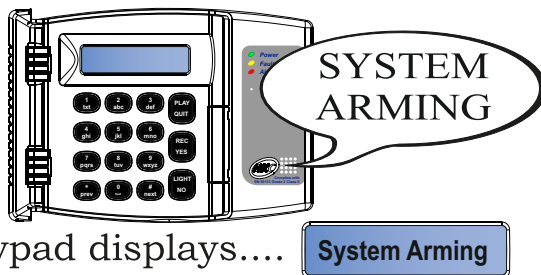

Keypad displays....




System Arming


## PART SET B

*Partial arming of the system*

Part set will automatically inhibit the following zones ....

\_\_\_\_\_/\_\_\_\_\_  
\_\_\_\_\_/\_\_\_\_\_

Press    User Code\*

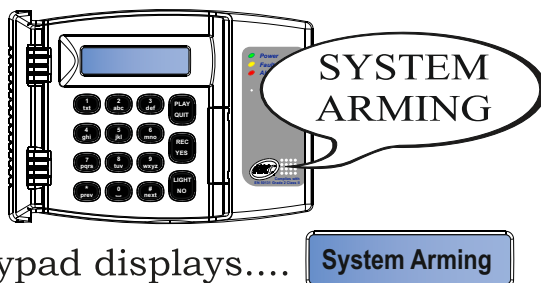

Keypad displays....

System Arming

**NOTES:** Zones inhibited in Part Set will remain inactive for the duration of system set.

\* *Quick Code with User Code is EN 50131 requirement*

## ZONE INHIBIT



CAUTION

Zones inhibited will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

### **Example 1:** To Inhibit Zone 5

Press User Code

Keypad displays...



System will now set with Zone 5 inhibited

It is possible to inhibit a number of zones as shown below.

### **Example 2:** To inhibit zones 5 & 3

Press User Code

**NOTE:** System will set in normal manner

## FORCED ARMING



CAUTION

Zones inhibited by forced arming will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

### **Example:** Zones 3, 4, 5 & 7 are open




Press User Code

System will now set with Zones 3,4,5 and 7 automatically inhibited for the duration of the system set.




# REMOTE RESET (UK only)

Your system may be programmed to trigger a remote reset after a confirmed alarm activation. In which case follow the instructions below...

Press  followed by the User Code. The first User Menu item is...

**Unset ?**

Press  to Unset the system

After the system announces the alarm events the following appears on the display...

**Quote Code nnnnn**

Where **nnnnn** is a five-digit number



**Call Alarm Centr**

Phone the Call Centre number on the inside cover

When you contact the Call Centre give them the five-digit number. They, in return, will give you a different five-digit number. Use this to reset the system.

**Note:** you will need to reset the system otherwise you will not be able to arm it

When you try to arm the system you will see the following...

**Reset Code:-----**

Simply key-in the five-digit number given to you by the call centre. You will then see...

**System Reset OK**


You are now free to continue arming your system

# RF-KEYFOB

If your system has an RF-Keyfob please note the following.

## ***RF-Keyfob in Quick Key mode***

Green:- Transmission OK, Red: Transmission not OK, Orange:- Out of range

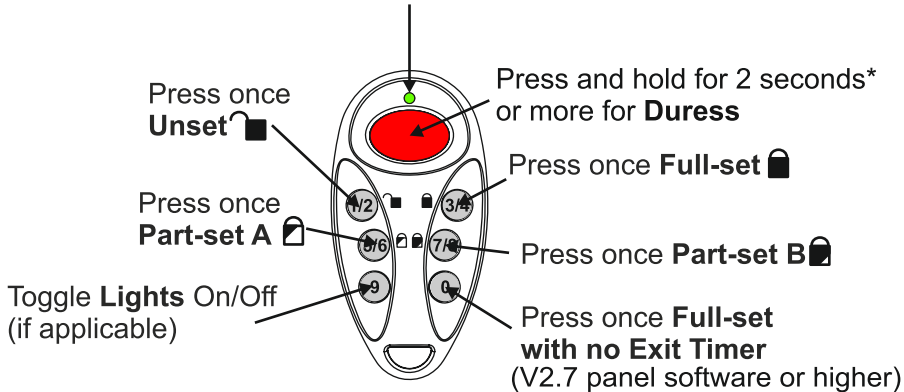

*\*This time is programmable - ask your installers for details*

Normally the RF-Keyfob works in “Quick Key” mode. However, you may ask your installer to set it up for “Secure Unset” mode.

In “Secure Unset” mode, to unset the system or to cancel an alarm press ① followed by User Code.

Also in “Secure Unset” mode;

Press  for **Full Set**

Press  for **Part-set A**

Press  for **Part-set B**

Press ⑨ to toggles **Lights** On/Off (if applicable)

***Note:*** Always make sure you get a green “transmission OK” light otherwise you will have to repeat your key-press.

**Zone & Point Details**

Z1		Z36		P50	
Z2		Z37		P51	
Z3		Z38		P52	
Z4		Z39		P53	
Z5		Z40		P54	
Z6		Z41		P55	
Z7		Z42		P56	
Z8		Z43		P57	
Z9		Z44		P58	
Z10		Z45		P59	
Z11		Z46		P60	
Z12		Z47		P61	
Z13		Z48		P62	
Z14		Z49		P63	
Z15		Z50		P64	
Z16		Z51		P65	
Z17		Z52		P66	
Z18		Z53		P67	
Z19		Z54		P68	
Z20		Z54		P69	
Z21		Z56		P70	
Z22		Z57		P71	
Z23		Z58		P72	
Z24		Z59		P73	
Z25		Z60		P74	
Z26		Z61		P75	
Z27		Z62		P76	
Z28		Z63		P77	
Z29		Z64		P78	
Z30		Z65		P79	
Z31		Z66		P80	
Z32		Z67		P81	
Z33		Z68		P82	
Z34		Z69		P83	
Z35		Z70		P84	
				P85	
				P86	
				P87	
				P88	
				P89	

